



Canon PowerShot A630 Batteries Replacement

If your camera will not turn on you may need to replace the batteries. Batteries should also be removed before any dis-assembly is performed. This guide will show you how to replace the batteries in your camera.

Written By: Alicia Burns



INTRODUCTION

Outline what you are going to teach someone how to do.

Step 1 — Open Battery Door



- Slide the tab on the battery door while pushing the battery door out from the camera.

Step 2 — Insert Batteries



- Remove current batteries
- Replace with 4 new AA batteries
- Shut the battery door and slide back toward the camera to lock into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-11 08:03:16 PM.